

**Telephone:**  
**Fax:**  
**VAT Registration No.:**

<b>Name:</b>		<b>Manufacturer:</b>	Ford
<b>Address:</b>		<b>Model:</b>	
		<b>Year:</b>	1996
		<b>Registration:</b>	
<b>Tel - Private:</b>		<b>Mileage:</b>	
<b>Tel - Business:</b>		<b>Job number:</b>	

A16	ABS control module
X88	AC connector
A23	Alarm system control module
31	Battery -
30	Battery +
S13	Brake pedal position (BPP) switch
B132	Camshaft position (CMP) sensor
A31	Central locking control module
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
A35	Engine control module (ECM)
K46	Engine control relay
K12	Engine coolant blower motor relay
B24	Engine coolant temperature (ECT) sensor
Y104	Evaporative emission (EVAP) canister purge valve
B127	Exhaust gas pressure sensor
Y28	Exhaust gas recirculation (EGR) solenoid
M12	Fuel pump
F	Fuse
B72	Heated oxygen sensor (HO2S)
K98	Heated windscreen relay
Y99	Idle air control (IAC) valve
T1	Ignition coil
A4	Ignition control module (ICM)
15	Ignition switch - ignition ON
S39	Inertia fuel shut-off (IFS) switch
Y3	Injector
A5	Instrument panel
A75	Instrumentation control module
B25	Intake air temperature (IAT) sensor
Y102	Intake manifold air control solenoid
B30	Mass air flow (MAF) sensor
W21	Octane coding plug
S159	Overdrive selection switch

S231	Power steering pressure (PSP) switch
B147	Throttle position (TP) sensor
S249	Transmission range (TR) switch
Y117	Transmission valve block
B33	Vehicle speed sensor (VSS)



